

WT-S14

Voice Prompter

(Human Body Induction) User Manual

1. Product features


- Easy installation
- Speaker: 8Ω2W
- Max volume :100dB
- Build with 4MB memory
- Build with TF card slot
- Build with a indicator light
- Build with a Micro USB port
- Build with rechargeable battery
- Product size : 14.8×5.1×19.5 cm
- Build with Volume control wheel
- Support external power amplifier voice output.
- Support two different trigger methods: Remote and PIR sensor
- Change sound file via a micro usb cable to connect with computer
- Support two different play mode : Single play mode and loop play mode

2. Electrical parameters

Power supply	Micro USB 5V/1A	
	3.7V 500mAH Lithium Battery	
Working current	Stand by mode	≤15uA
	Playing mode	≤210mA
Charging current	≤950mA	
Format	MP3	Rate : 16~320Kbps
Speaker	8 Ω /2W	
PIR sensor range	0-8 meters	
Remote working range	50 meters	
Volume level	≥100dB	
Working time	Support to play a 10 second sound file 50 times per day ,then it can play 12 days	

3.Panel and operating guidance

3-1 Panel presentation

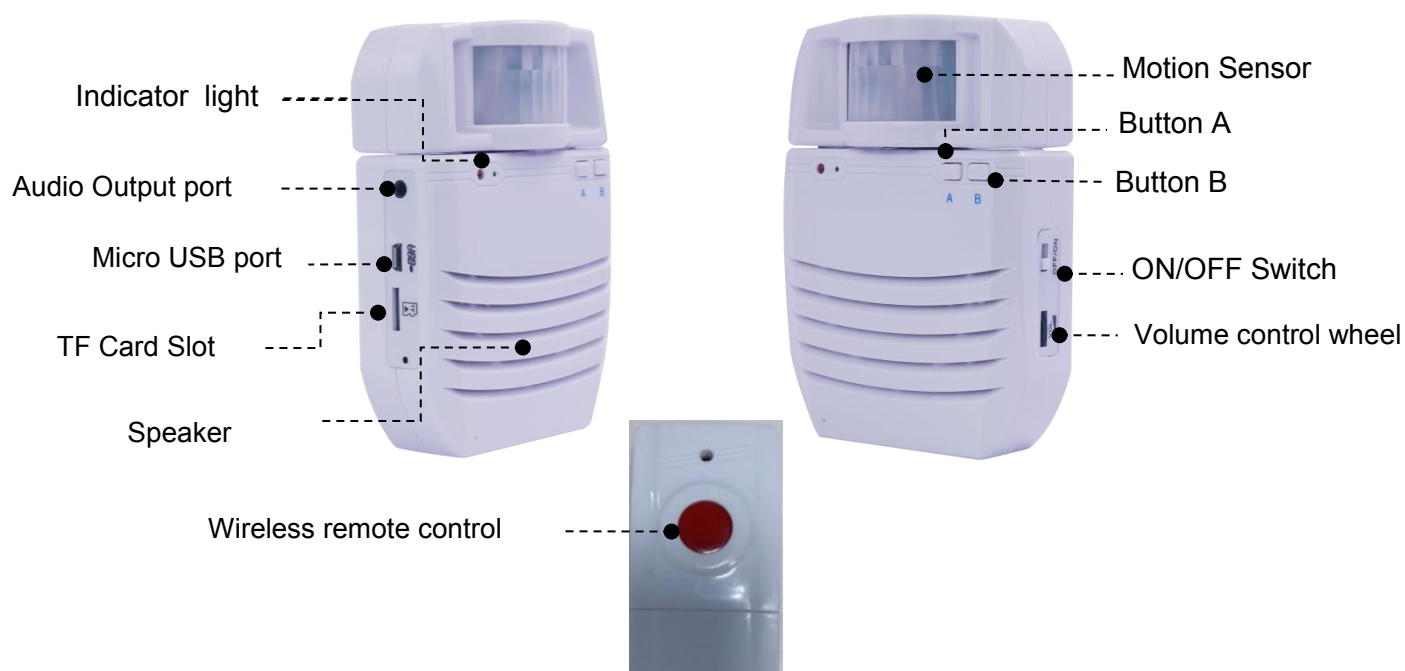

3-2 Button Function

Button Name	Operation	Function
ON/OFF Button	Pull up	Turn on
Button A	Press	Previous song
	Hold for 3 seconds	Select play mode:single or loop
	Insert TF card ,then hold A button ,then Turn on device	Upload sound file from TF card to Device ,indicator light stop flash mean finish upload
Button B	Press	Next song
A+B	Hold button A and B together for 5 seconds after turn on	Pair remote with device (press remote button when indicate light flashes)
	Hold button A and B together ,then turn on device	Turn on/ off PIR sensor

3-3 Indicator light instruction

Color	Working Mode	Status
Red	Playing	On
	Low electricity	Red light flashes and no sound to play
	Charging	Flash slowly
	Connect with computer	Flash slowly
	Full Charge	Flash twice every 5 seconds

3-4 Change sound file

- ① Insert TF card
- ② Connect with computer by Micro USB cable, find the disk
- ③ Put sound file in the disk
- ④ Disconnect with compute.

3-5 AUX port

Use AUX cable to connect with speaker and WT-S12 to enlarge volume

3-6 How to use remote

Press button can trigger WT-S14 to play sound once after pair


4. Installation and fast guidance

4-1 Stand install




4-2 Installation sketch

- ① Install in door

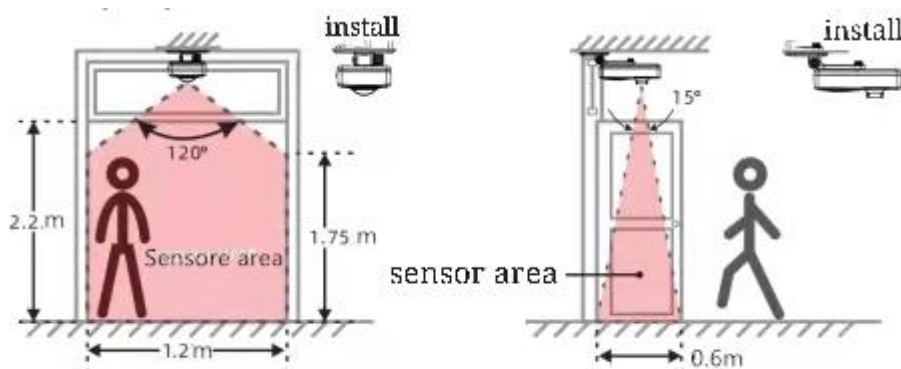

② Install on the side

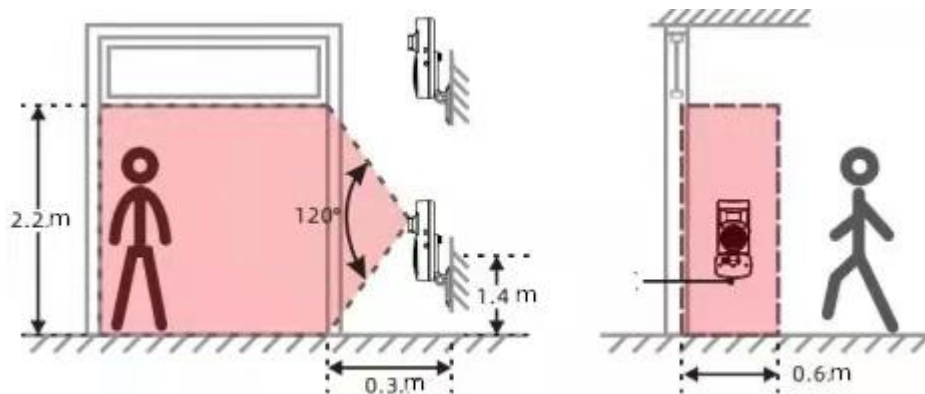

5.Cautions

- Environment temperature too high($\geq 35^{\circ}\text{C}$) will affect the induction distance and sensitivity.
- Air conditioner or electric fan right to the sensor, that will affect the induction distance and sensitivity.

6.FAQ

1: why can't I hear any sound after turn on the device

Answer: (1) please check if the volume level is "mute"

(2) please check if the format of sound file is MP3, and the capacity is less than standard capacity.

2: How to supply power to WT-S14?

Answer: there are two different way: one is using 5V USB adapter ,other one is inside battery

3: Why can't I find the disk when connect with computer via USA cable?

Answer: (1) Normally it will takes 5 seconds to found the disk

(2) please check if the USB cable is working

4: When playing ,why the sound is not clear ?

Answer : (1) please check if the rate of sound file is too high , the good rate is 128kpbs.

(2) Please check if the battery is enough, if not ,please charge .

5: Why can't the remote trigger WT-S14 to play ?

Answer: (1) Please make sure the remote is pair with WT-S14 successfully

7. Accessories

Name	QTY
WT-S14	1
Stand	1
Adapter 5V1A	1
Cable	1
Instruction	1
Wireless remote	1