

WT-S11 V1.00

Voice Prompter

(Human Body Induction)

User Manual



1. Product features

- Memory : 4 MB
- Easy installation
- Build with infrared sensor
- Speaker: 8Ω2W
- Max volume :100 dB
- Select sound file by press Button A
- Select single play mode by hold Button A
- Select all circle play mode by hold Button B
- Build with indicator Light
- Support to connect a external speaker
- Change sound file via Micro USB cable
- Adjustable volume level from 1 - 8 by press button B

2. Electrical parameters

Power supply	Micro USB 5V/1A	
	3.7V 500mAH Lithium Battery	
Working current	Stand by mode	≤40uA
	Playing mode	≤260mA
Charging current	≤950mA	
Format	MP3	Rate : 16~320Kbps
Speaker	8Ω/2W	
Sensor Range	0-6 meter	
Volume level	≥100dB	
Working time	Support to play a 10 second sound file 50time per day ,then it can play 12 days	

3. Panel and operating guidance

3-1: Panel



3-2: Button Function

Button Name	Operation	Function
ON/OFF Button	Pull up	Turn on
Button A	Press	Next
	Hold for 3 seconds	Select single play mode
Button B	Press	Adjust volume from 1 - 8
	Hold for 3 seconds	Select All Circle play mode

3-3: Indicator light instruction

Color	Working Mode	Status
Red	Playing	On
	Low electricity	Flashes 5 times
	Charging	Flash slowly
	Connect with computer	Flash slowly
Green	Full charge	Always on
Green +red	Turning on	Both color flash slowly

3-4: Change sound file

- ① Connect with computer by Micro USB cable, find the disk
- ② Put sound file to the disk
- ③ Disconnect with computer, then press A button to listen

3-5: AUX port

Use AUX cable to connect with speaker and WT-S11 to enlarge volume


4. Installation and fast guidance

4-1: Stand install




4-2: Installation sketch

① Install in door

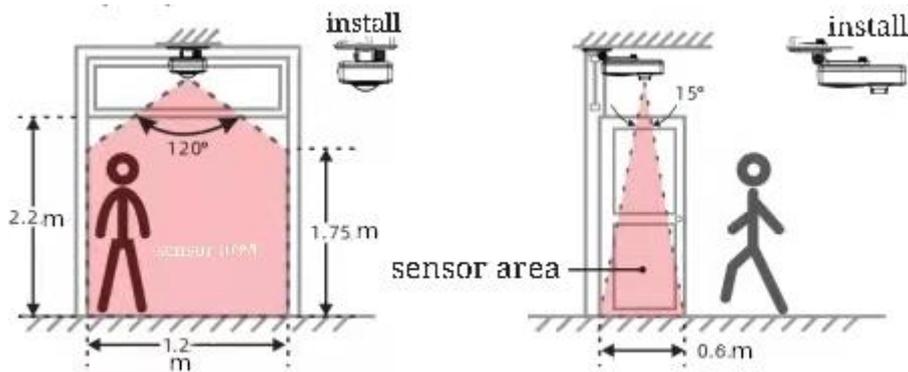

② Install on the side

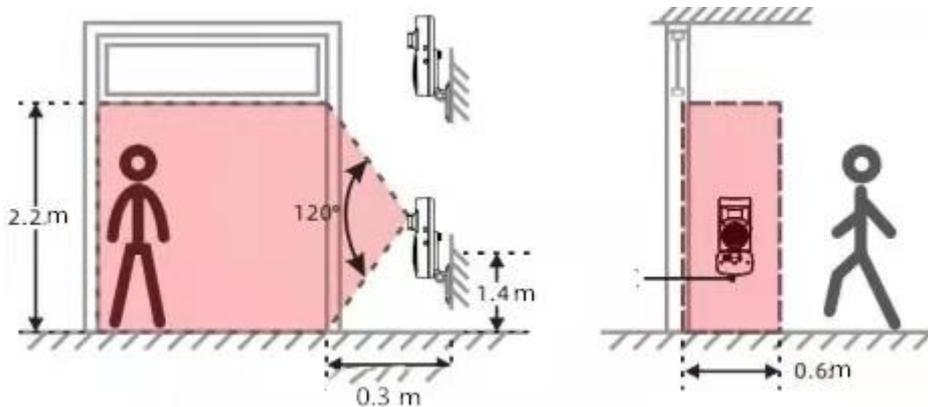

5.Cautions

- Environment temperature too high($\geq 35^{\circ}\text{C}$) will affect the induction distance and sensitivity.
- Air conditioner or electric fan right to the sensor, that will affect the induction distance and sensitivity.

6.FAQ

1: Why can't I hear any sound after turn on the device

Answer: (1)please check if the volume level is "mute"

(2) please check if the format of sound file is MP3, and the capacity is less than standard capacity.

2: How to supply power to WT-S11?

Answer:there are two different way: one is using 5V USB adapter ,other one is inside battery

3: Why can't I find the disk when connect with computer via USB cable?

Answer: (1)Normally it will takes 5 seconds to found the disk

(2)please check if the USB cable is working

4:When playing ,why the sound is not clear ?

(1)please check if the rate of sound file is too high , the good rate is 128kpbs.

(2)Please check if the battery is enough, if not ,please charge .

7.Accessories

Name	QTY
WT-S11	1
Stand	1
Adapter 5V1A	1
Cable	1
Instruction	1

Indemnification

SHENZHEN WAYTRONIC ELECTRONIC CO.,LTD. reserves the right to modify and use information without prior notice to customers. New product specifications will be subject to the latest version.

Contact Us

Shenzhen Waytronic Electronics Co., Ltd.

Tel: +86-755-29605099

Fax : +86-755-29606626

Website: <https://www.waytronicmfg.com/>

E-mail: info@waytronicmfg.com

Add:4/F,Building No.11,Fuan Robotics Industrial Park, Fuyong,Baoan District,Shenzhen ,518103,Guangdong ,China